
LANKELEISI

VORA-7 | E-BIKE USER MANUAL

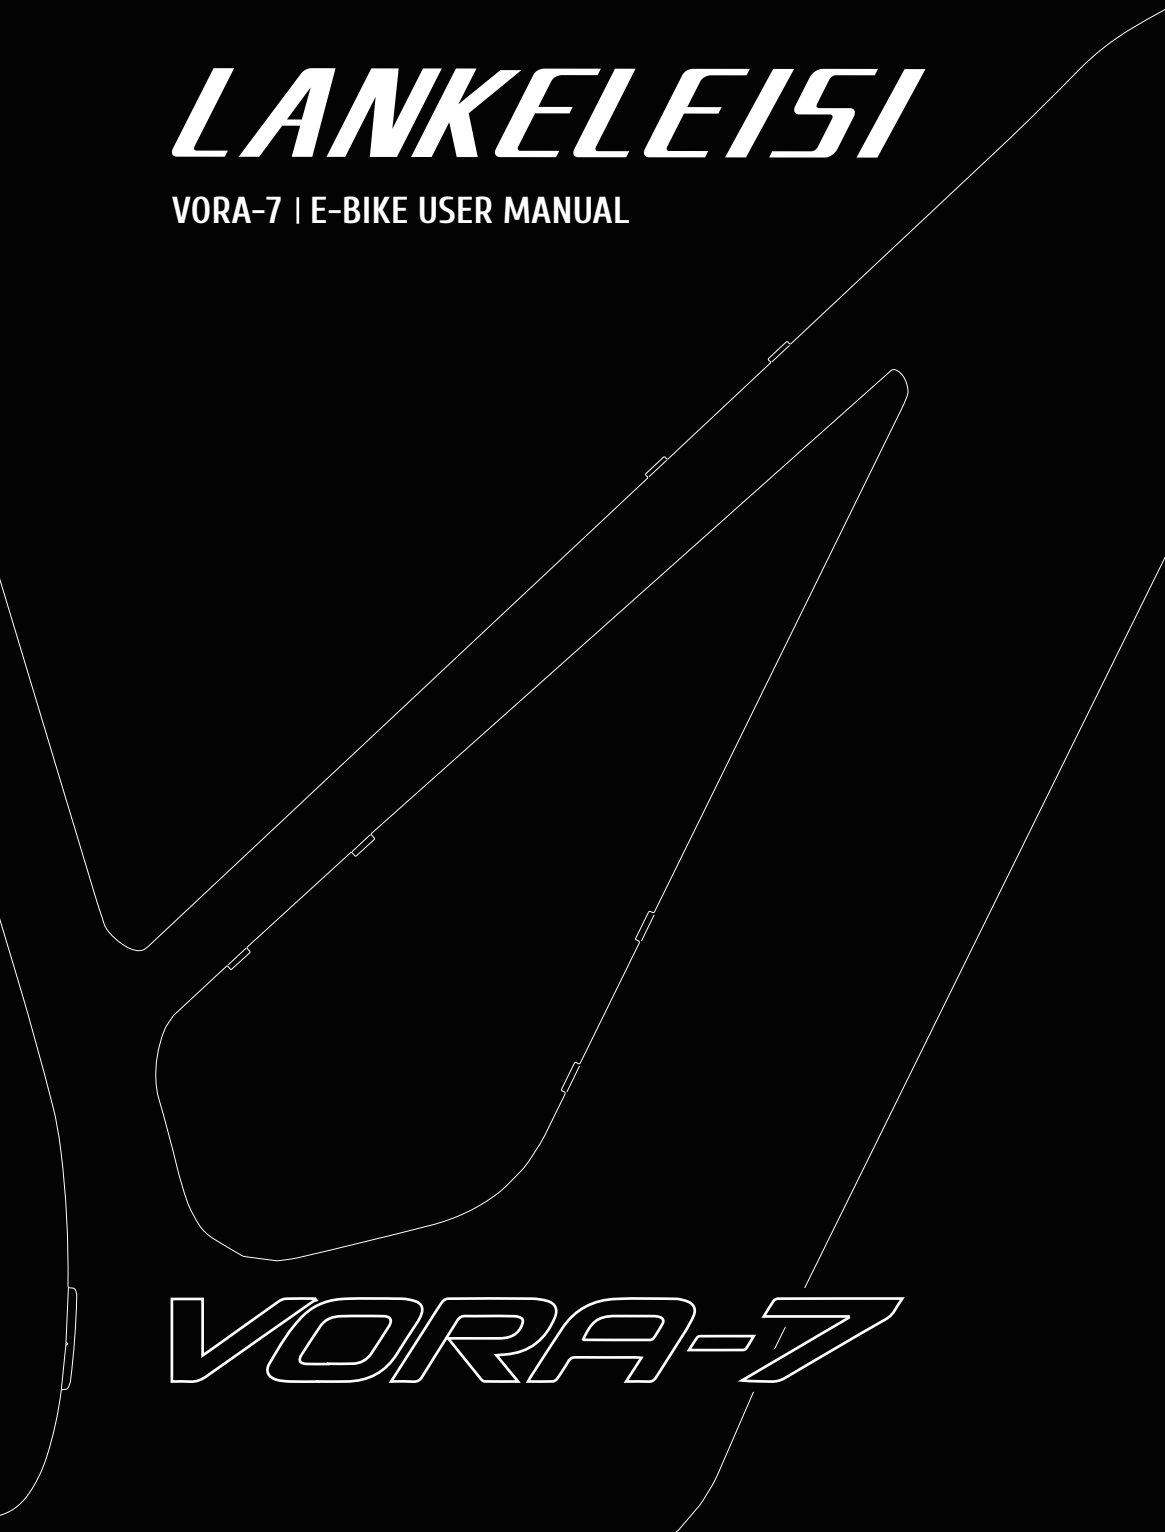

WELCOME

Enjoy your new LANKELEISI E-Bike and ride safely.

Support & Contact

For product support, please contact your retailer or dealer.
Manufacturer and dealer inquiries:
support@lklsebike.com
www.lklsebike.com

Manuals in Other Languages

For manuals in other languages, please contact your retailer or dealer.

READ BEFORE USE

Symbol Explanation


Important Safety Notice


Operating Tip


Rotation Direction


Correct Way


Incorrect Way


Prohibited Action

Recommendations for Use

Before assembly and first use, carefully read this user manual.
This manual includes important information about:

1. Safety Precautions.
2. Assembly and First-Use Checks.
3. Product Operation and Maintenance.


For a safer and smoother first ride, please make sure the bicycle is correctly assembled, the brakes and tires are checked, the battery is properly installed, and all screws are securely tightened before riding. For detailed product information, please refer to the relevant sections of this User Manual.

CONTENTS

Pay special attention to all notes, warnings, and cautions marked with the caution symbol.

01. Bicycle Structure and Components	04
02. Tool List	05
03. Assembling Your LANKELEISI E-Bike	06
04. Handlebar Assembly	07
05. Handlebar Controls & Grips	09
06. Headlight Installation Wiring	12
07. Front Fender Installation	14
08. Pedal Installation	18
09. Handlebar Angle Adjustment	20
10. Important Seatpost Safety Notice	22
11. Battery Installation & Removal	23
12. Tire Pressure	25
13. Display Overview	26
14. Control Pad Overview	27
15. Power On & Unlock	28
16. Basic Riding Operation	29
17. Settings Menu	31
18. P01–P12 Parameter Settings	32
19. Power-On Password Setting	33
20. Error Codes & Support	34
21. Before Your First Ride	36
22. Routine Maintenance	38
23. Frame Code	42
24. Warranty Service	44
25. FAQ & Warnings	45
26. Safety Warnings	47


BICYCLE STRUCTURE AND COMPONENTS

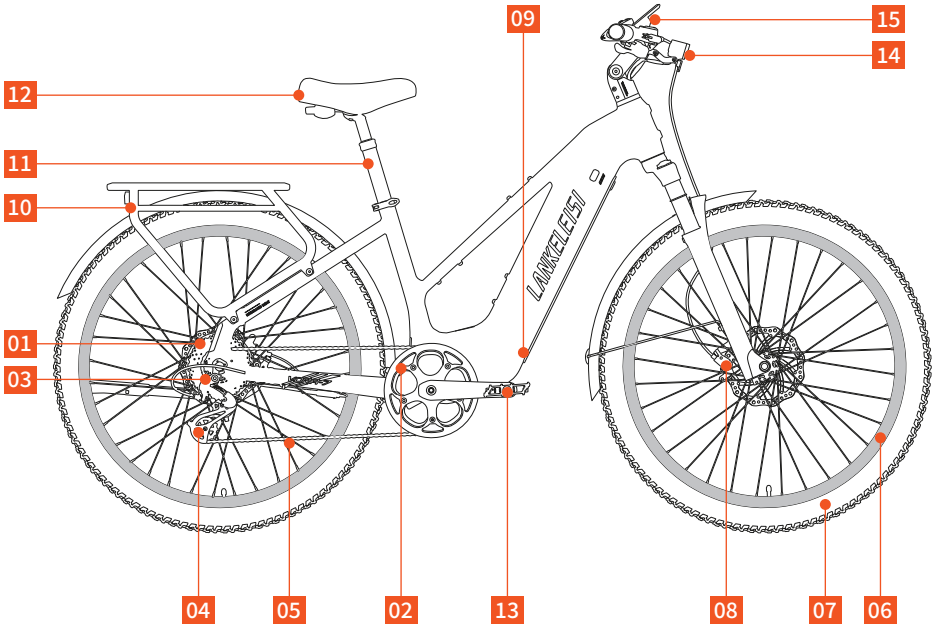


01. Motor
02. Chainring
03. Cassette
04. Rear derailleur
05. Chain
06. Rim
07. Tire
08. Brake
09. Battery
10. Rear rack
11. Seatpost
12. Seat
13. Pedal
14. Headlight
15. Display

TOOL LIST


Before installation, check that all parts and tools are included.
Please follow the installation steps, pictures, and instructions in order.

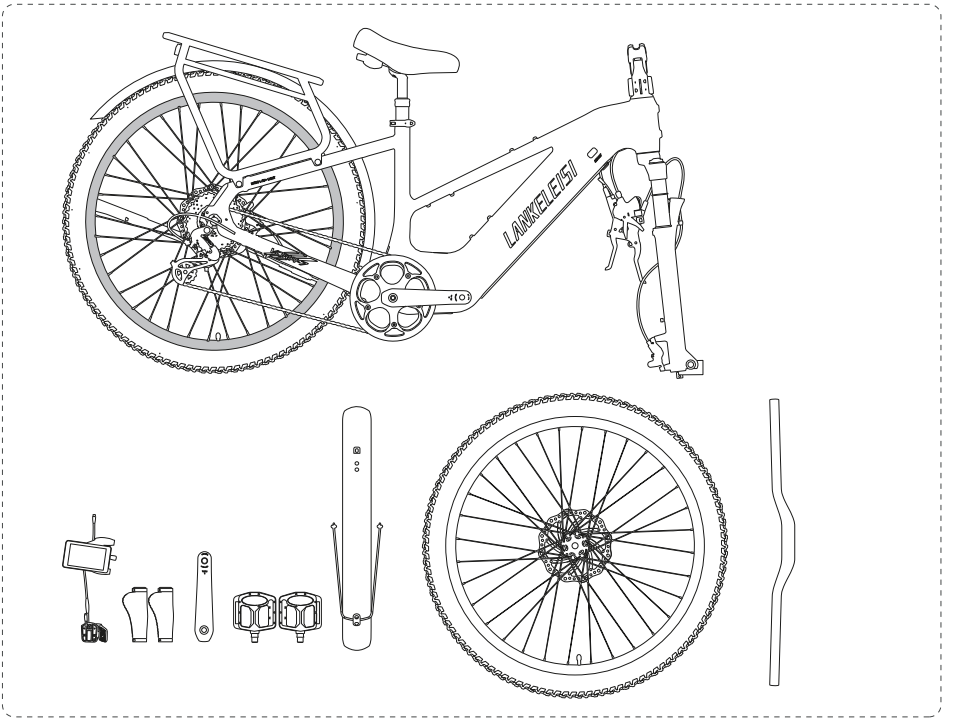


Tool List

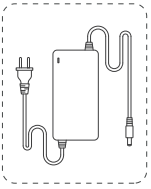


Charger
x1

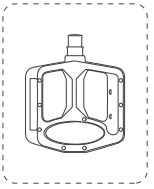


Pedals
x2

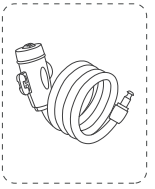

Cable Lock
x1

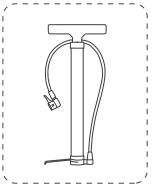

Pump
x1

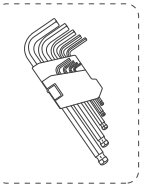


Hex Wrench
x1




Open-End Wrench
x1


ASSEMBLING YOUR LANKELEISI E-BIKE

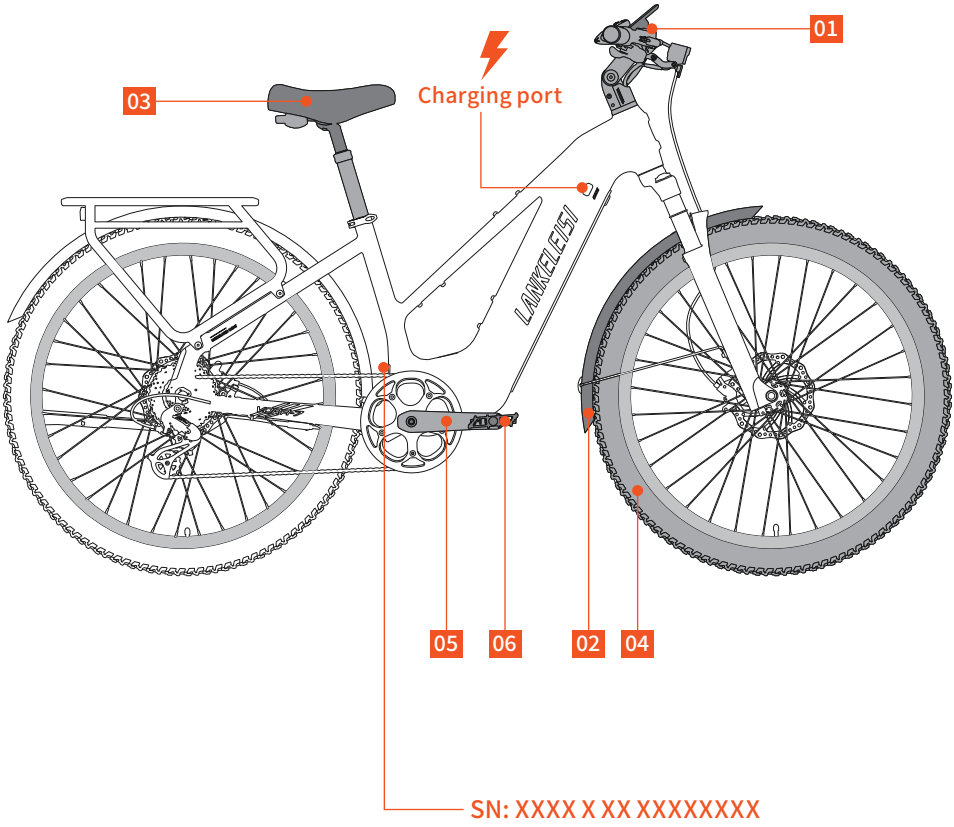

PART 1: HANDLEBAR ASSEMBLY

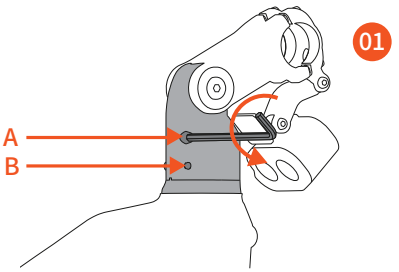


Loosen screws A and B on the stem. Before installation, make sure the front and rear brake levers are installed on their correct sides.

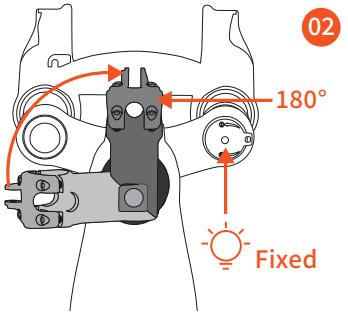

Hold the front fork steady, then rotate the riser by 180°.


Hint

This part is fixed and must not rotate with the other components.

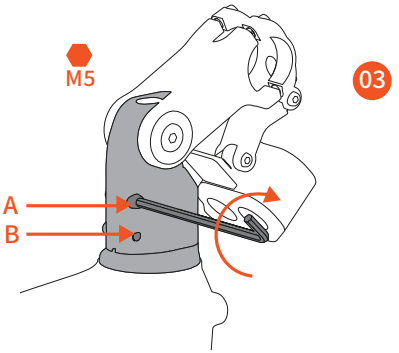


Tighten the A and B screws on the riser.

HEADLIGHT & STEM COVER REMOVAL

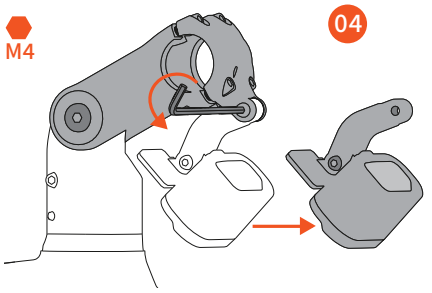

Remove the headlight screws, then carefully detach the headlight.

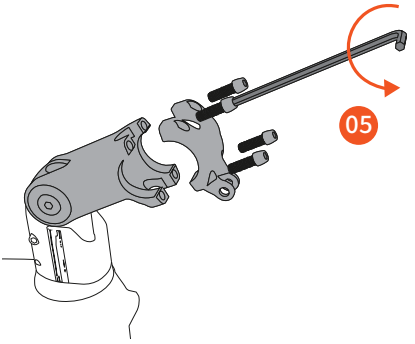



Remove the four front bolts from the stem cover, then remove the cover.

Hint


Support the headlight during removal to avoid pulling or damaging the wiring, and keep the screws in a safe place.

PART 2: HANDLEBAR CONTROLS & GRIPS

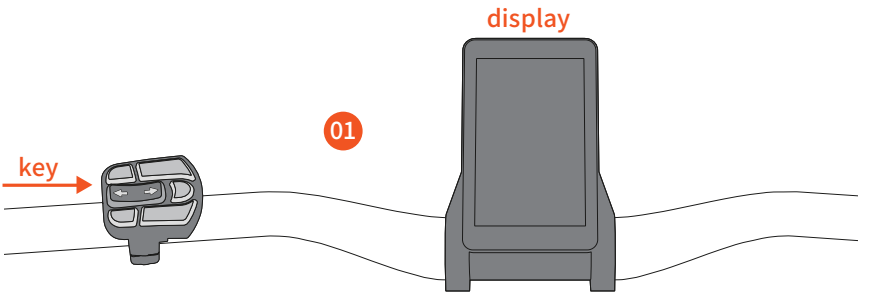

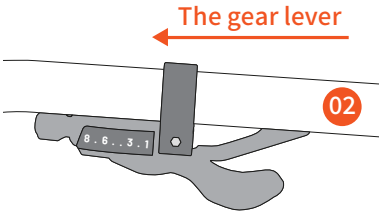


Install the control pad, display, and shift lever on the handlebar in the positions and orientations shown.

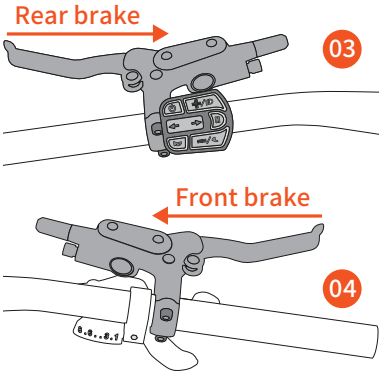


Install the front and rear brake levers on the handlebar in the positions and orientations shown.


GRIPS & CABLE MANAGEMENT

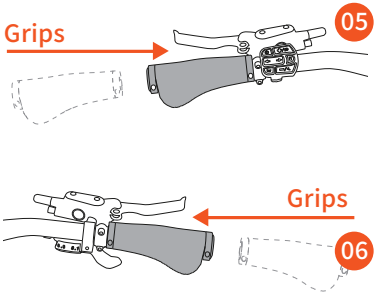

Install the grips on the handlebar as shown.

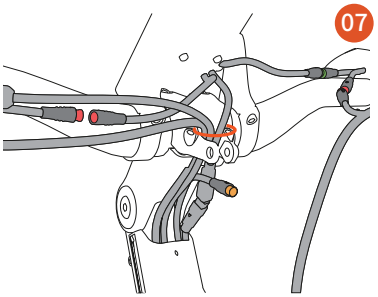


Straighten the cables and route them into the grooves.

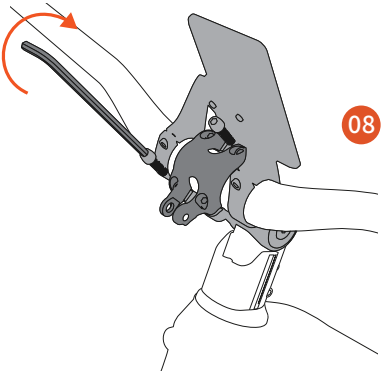

Tighten the stem faceplate bolts and the display mounting screws in sequence.


HANDLEBAR COMPONENT FASTENING

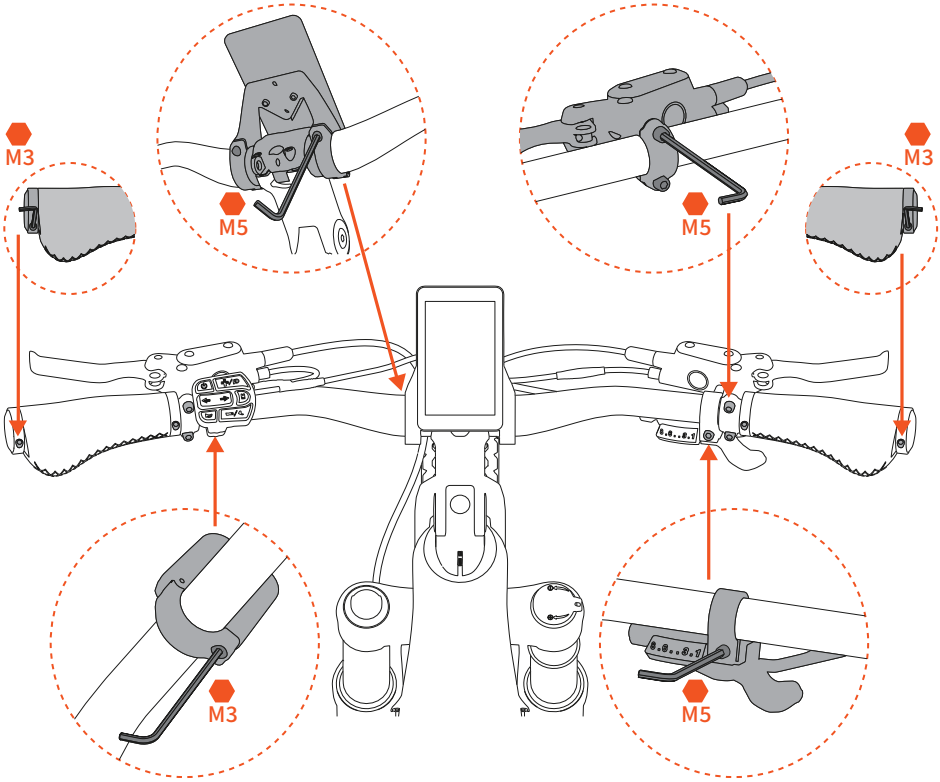


Hint

Tighten the mounting screws for all handlebar components in sequence: the left and right grips, brake levers, shift lever, and control pad.


PART 3: HEADLIGHT INSTALLATION & WIRING

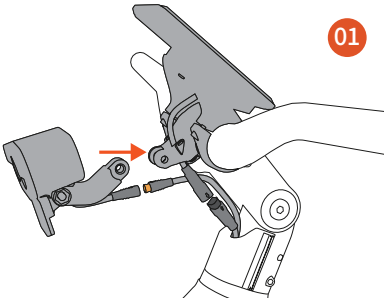

Connect the headlight.

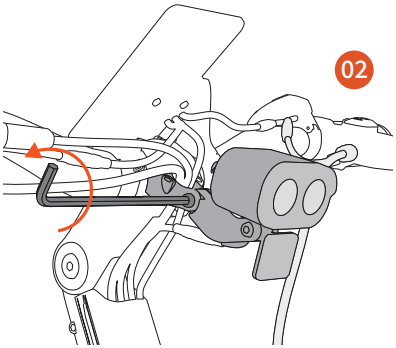


Install the headlight and tighten the screws.

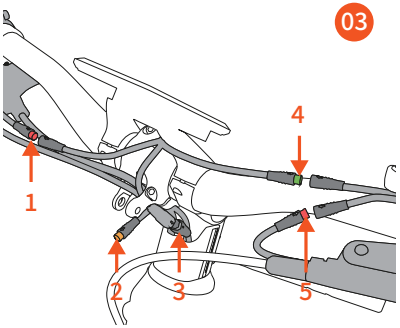


Connect the brake cable(s), headlight cable, display cable, and control-pad cable as shown in the wiring diagram.

CABLE ROUTING AND INSTALLATION

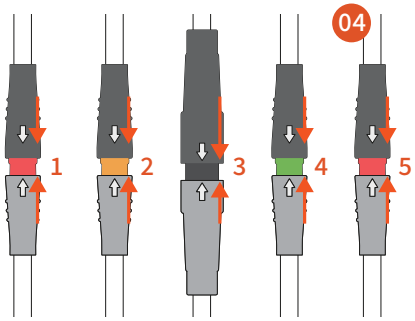

Wiring Diagram: Align the arrow marks and ensure the connectors are fully engaged.

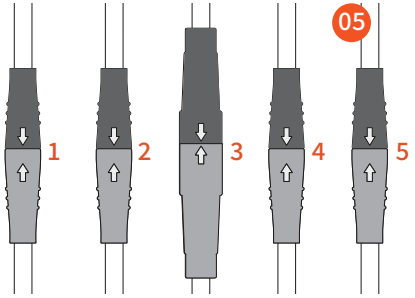


Push the connectors together until fully seated.

Hint

After connecting the cables, route and secure them to prevent excessive bending, pinching, or contact with wheels and other moving parts.


PART 4: FRONT FENDER INSTALLATION

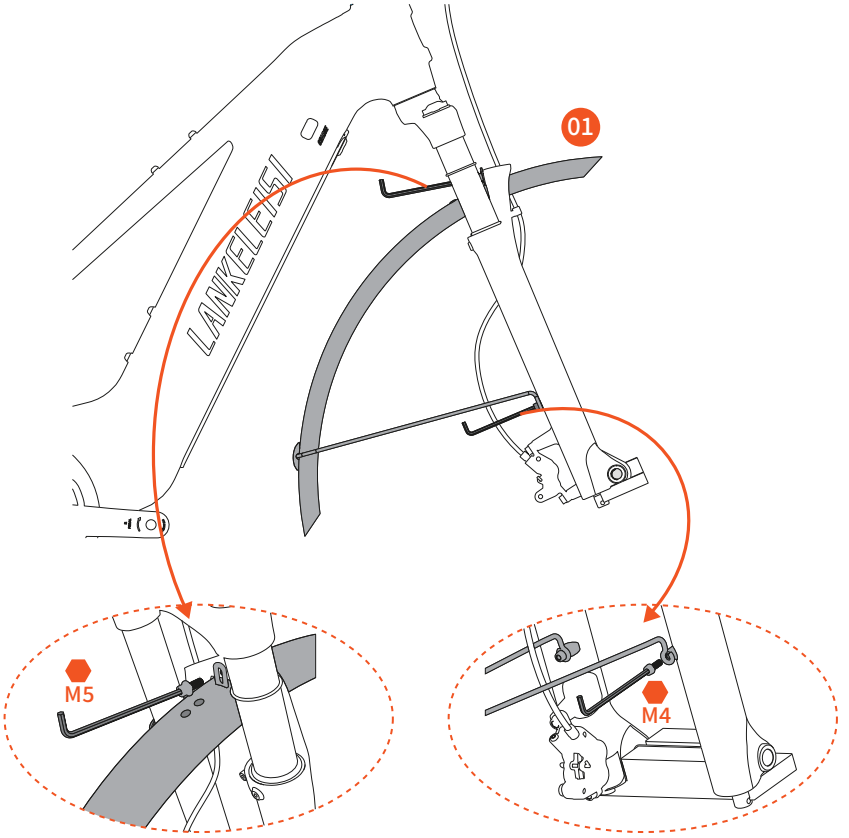

Hint

1. Install using an M5 hex key.
2. Install the front fender using an M4 hex key.


FRONT WHEEL PRECAUTIONS

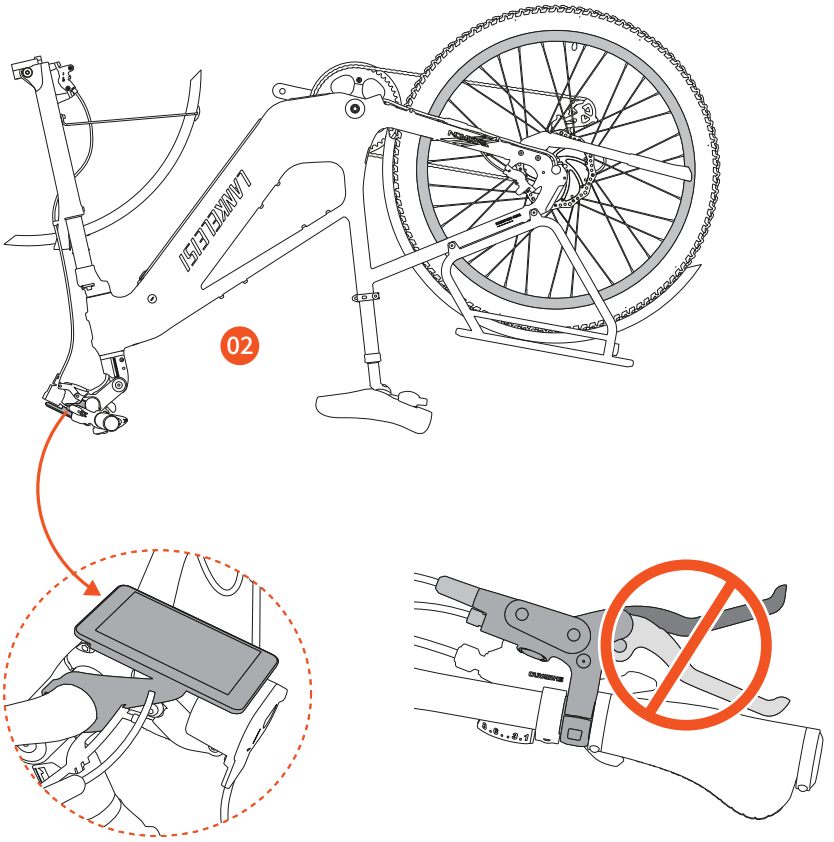


Important

Before installing the front wheel, Carefully turn the bike upside down. Reposition the display so that it does not strike or rest directly on the ground. Do not operate the brake levers while the front wheel is removed or the brake rotor is outside the caliper.

FRONT WHEEL PREPARATION & ALIGNMENT

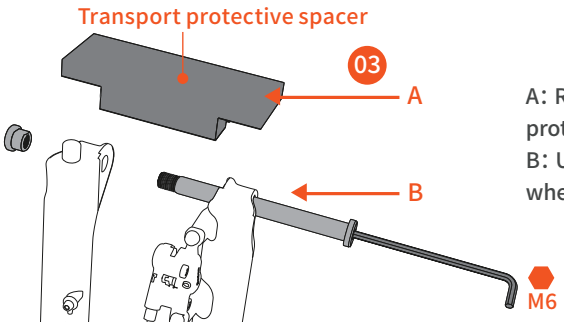


A: Remove the shipping protective pad.
B: Use tools to remove the front wheel mounting axle.

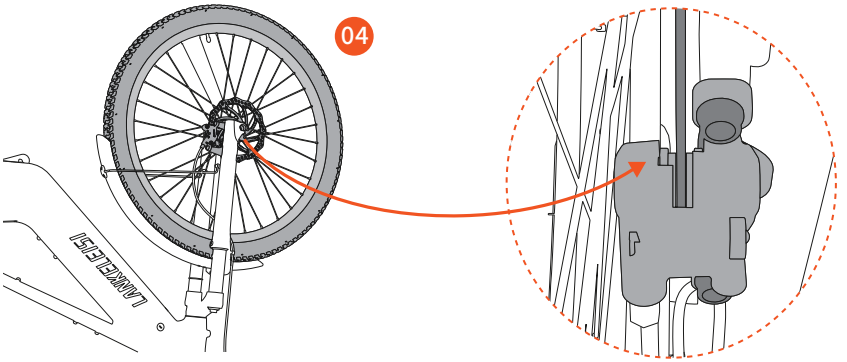


Hint

Place the wheel in the front fork. Make sure the brake rotor is correctly positioned.

FRONT WHEEL SECURING & INSPECTION

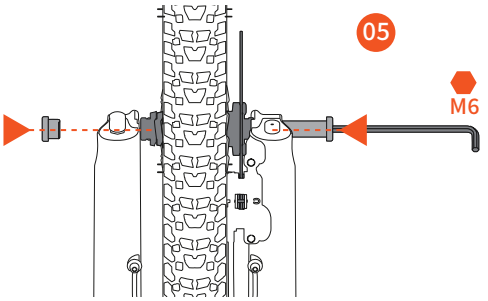


Insert the front axle from the disc-brake side.

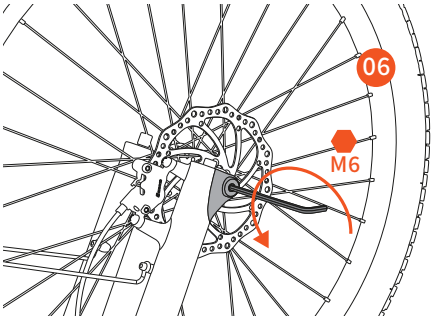


Use tools to tighten the front wheel mounting axle.


Hint


Spin the wheel to confirm the front axle is securely locked and the brake rotor does not rub or make abnormal noise.

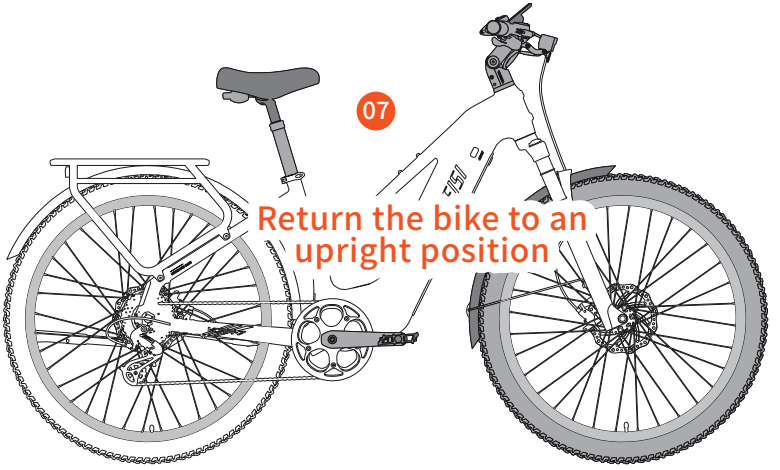


PART 5: PEDAL INSTALLATION

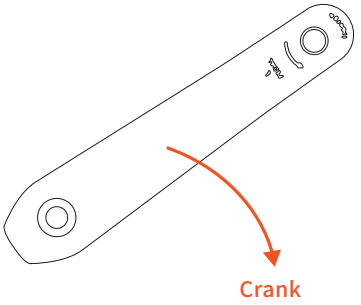

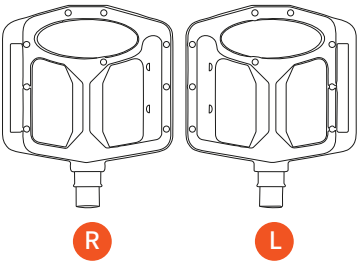

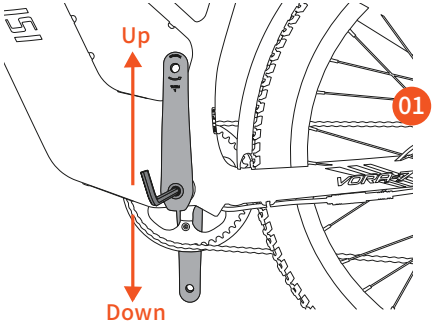


Position the right crank vertically downward. Orient the left crank upward, 180° opposite the right crank, then tighten the bolt securely.

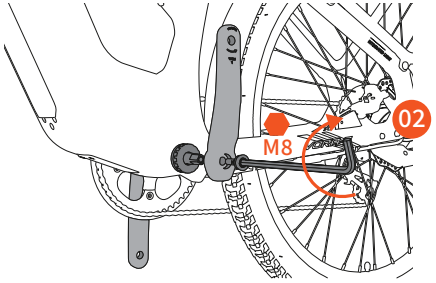

Use an M8 hex key to tighten the crank bolt(s) securely.

LEFT & RIGHT PEDAL INSTALLATION


Identify the left pedal (L) and right pedal (R) before installation.

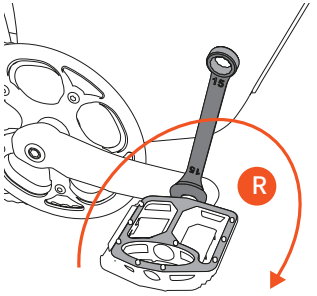

03

RIGHT PEDAL (R)

Align the right crank to the 3 o' clock position.
Install the right pedal (R) by hand first, then tighten it clockwise.

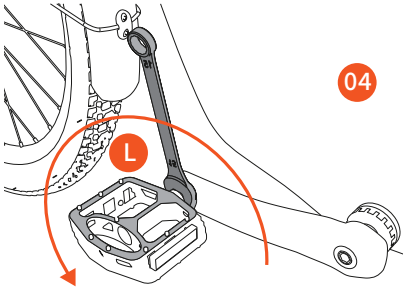

04


LEFT PEDAL (L)

Align the left crank to the 9 o' clock position.
Install the left pedal (L) by hand first, then tighten it counterclockwise.

Important


If significant resistance is felt, stop installing the pedal immediately.
Check the left/right pedal position and thread direction before reinstalling.
Do not force installation.

PART 6: HANDLEBAR ANGLE ADJUSTMENT

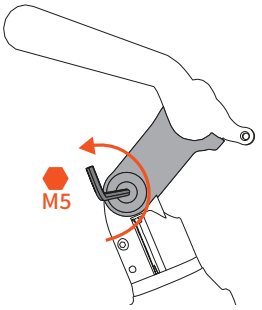

01

Loosen the screws and adjust the handlebar angle to suit your riding style.

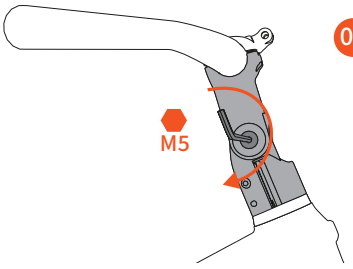


02

Adjust the handlebar angle, then tighten the screws securely.

Hint


Support the handlebar during adjustment to avoid pulling the cables.
Tighten the screws securely and check that the handlebar does not move.

SEATPOST INSTALLATION

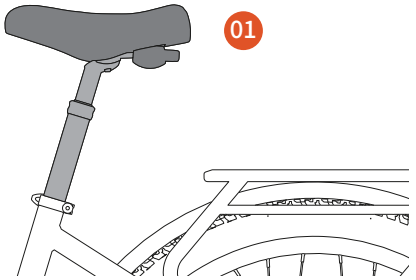


01

Insert the seatpost into the frame and adjust the saddle height according to your riding position. Make sure the minimum insertion mark is not exposed.

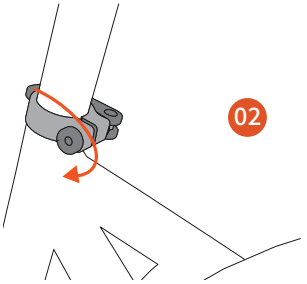

02

Adjust the seatpost clamp-lever tension. If the saddle slides down, tighten the adjustment screw slightly.

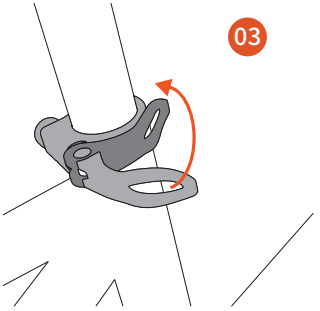



03

Close the seatpost clamp lever to secure the saddle. Make sure the saddle is firmly locked and does not move.


IMPORTANT SEATPOST SAFETY NOTICE

Do not expose the minimum insertion line when installing the seatpost.

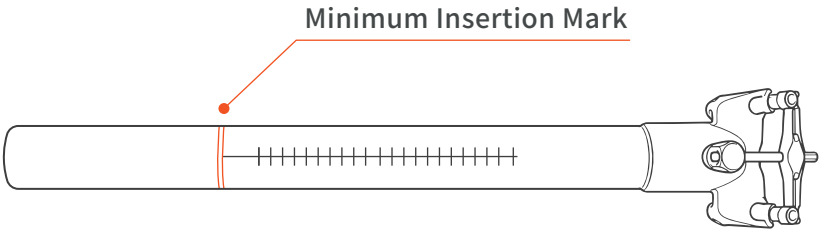

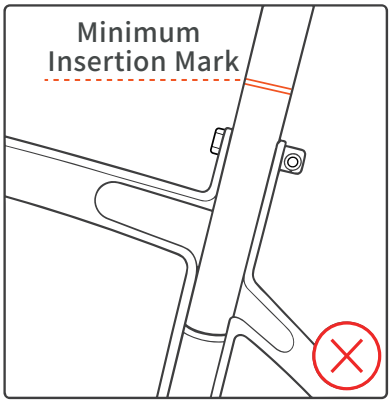

Wrong
installation

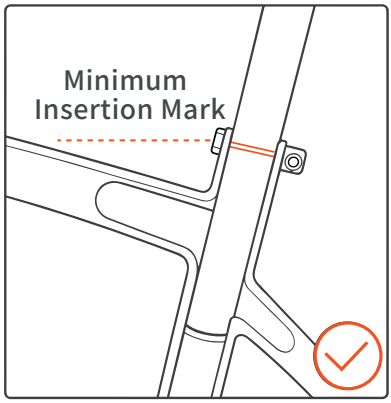


Correct
installation

Important

Make sure the seatpost is inserted beyond the minimum insertion mark.


PART 7: BATTERY INSTALLATION & REMOVAL

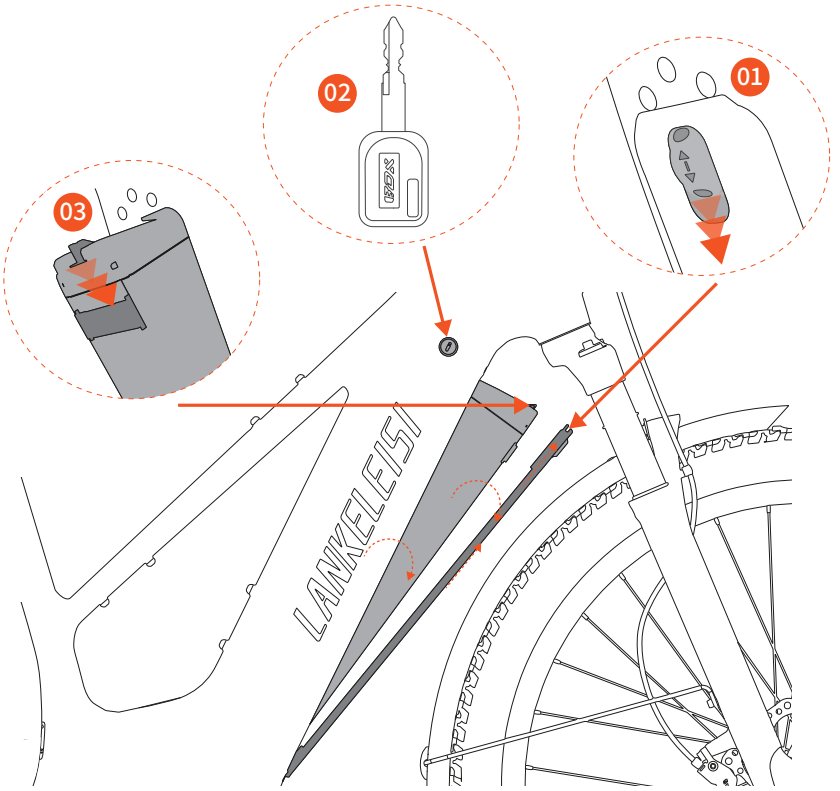


Hint

1. Slide the latch down and remove the battery cover.
2. Insert the key and turn to unlock.
3. slide the latch and remove the battery.

CHARGING THE BATTERY

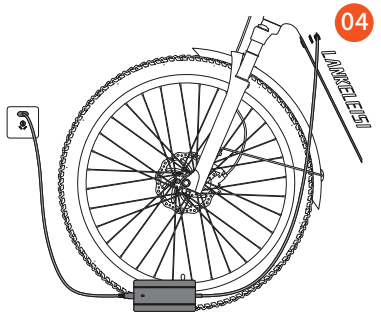

Charge the battery through the charging port on the bike.

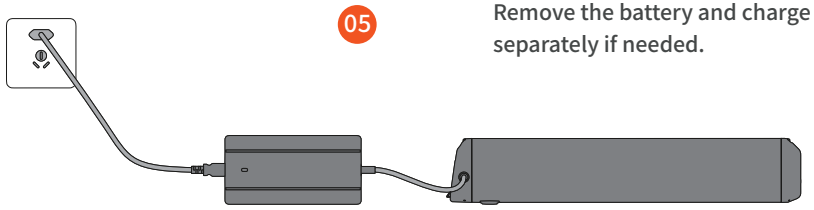


Remove the battery and charge it separately if needed.

Important

Charge only in dry conditions and away from flammable materials. Do not use a damaged battery or charger, and do not cover the charger while charging. Use only the supplied charger.

PART 8: TIRE PRESSURE

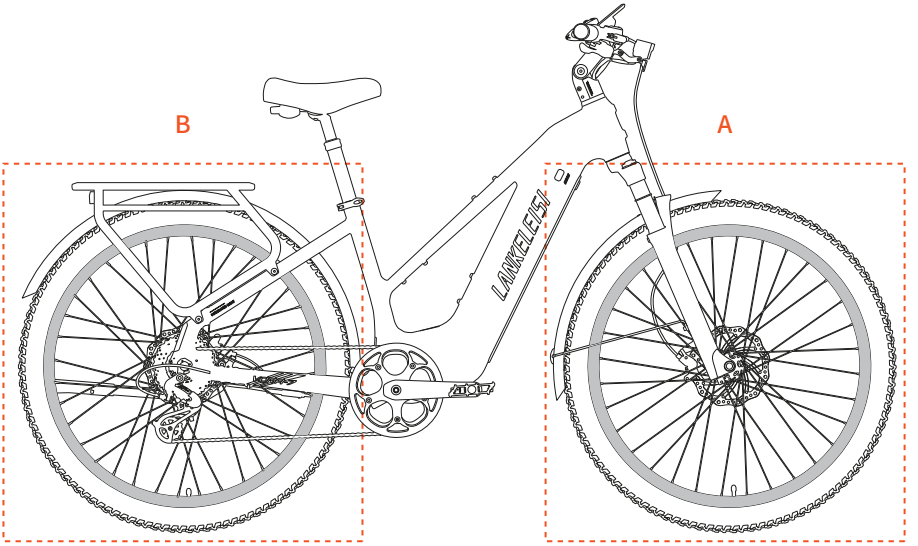


KG kg	A Front psi	B Rear psi
50	40	45
60	42	48
70	43	50
80	45	52
90	46	54
100	48	55
110	50	58
120	52	60

For most riders, inflate to 45–55 psi (3.1–3.8 bar), depending on rider weight and riding conditions.

PART 9: DISPLAY OVERVIEW

Main Screen Information

The display shows key riding information, including current speed, battery level, assist level, mileage, light status, turn-signal status, and error codes.

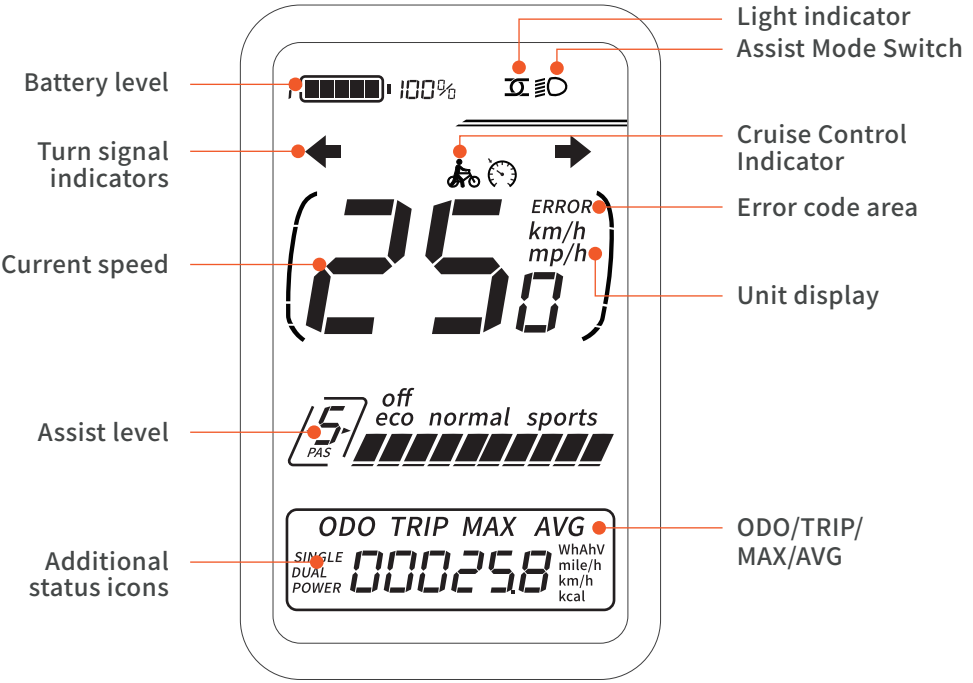


Important

Screen content may vary slightly depending on the bike model and controller configuration.

PART 10: CONTROL PAD OVERVIEW


Use the control pad to operate the display and key riding functions.

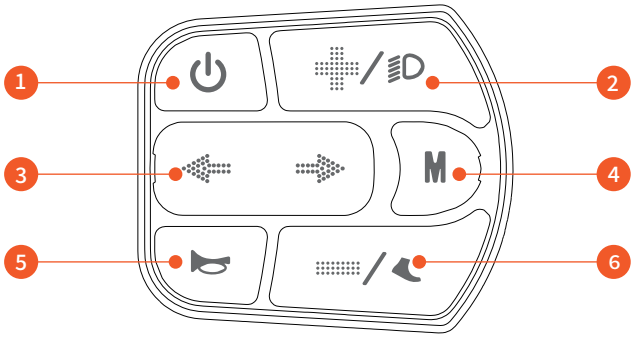

Button	Function
⏻	Turn the display on/off;
/D	Increase the assist level / Turn the lights on/off
⇦ ⇨	Turn signals
M	Switch display information / Enter settings
	Horn
/	Decrease assist level / Activate walk assist

Learn the location of each button before your first ride.

PART 11: POWER ON & UNLOCK

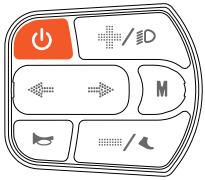

3s

Press and hold the Power button for 3 seconds.



Unlock Successful


Hold the Power button to turn off the display.
It will turn off automatically after about 10 minutes of inactivity.

Important

Remember your new password after changing it.


PART 12: BASIC RIDING OPERATION

Use the control pad to operate the display and key riding functions.

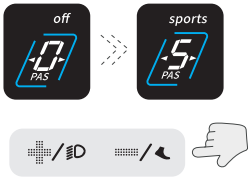

Assist Level

Press【+】or【−】to adjust assist level.
Level 0 means no assistance.
Higher levels give more power and use more battery.

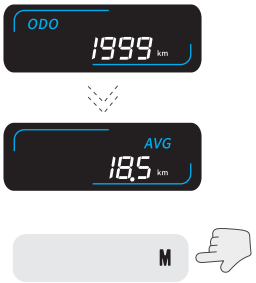


Display Information

Press【M】to switch between ODO / TRIP / MAX / AVG.
ODO: Total distance; TRIP: Trip distance;
MAX: Maximum speed; AVG: Average speed.



Lights


Hold the /D button to turn the headlight on or off. The display backlight may dim automatically when the headlight is on.

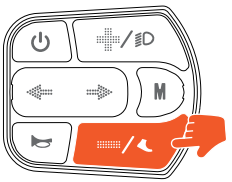

Walk Assist

Hold the button to activate walk assist when stopped. Release to stop. Use only when pushing the bike.


ADDITIONAL CONTROLS & INDICATORS

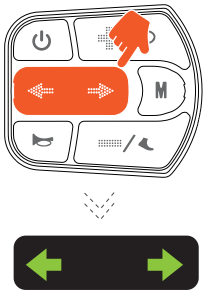


Turn Signals

Press the left or right signal button to turn on the turn signal.

Hold both signal buttons to turn on the hazard lights. After completing the turn, press the same signal button again to switch the signal off.

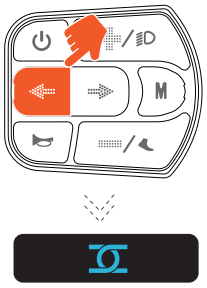

Torque / Cadence Mode Switching

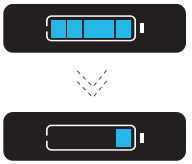

Battery Level


The battery icon shows remaining power.
Charge soon when the battery is low or flashing.

PART 13: SETTINGS MENU

How to enter and use the settings menu.

Important

Only change advanced settings when the bike is stationary and the speed shows 0. Incorrect settings may affect speed display, motor output, battery display, riding safety, and legal compliance.

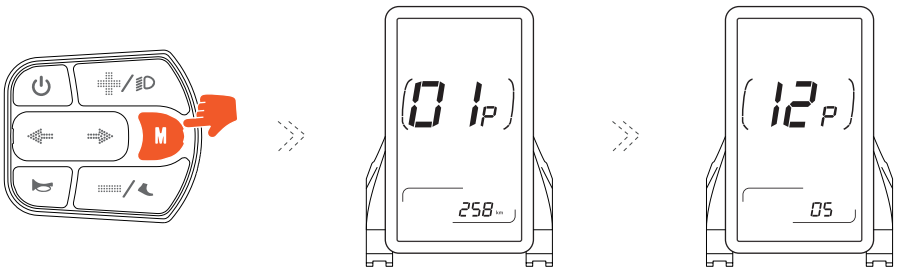




Make sure the speed shows 0.

1. Hold【M】for more than 3 seconds to enter settings.
2. Press【M】to switch items.
3. Press【+】or【-】to adjust the value.
4. Press【M】to save and move to the next item.
5. Hold【M】to save and exit.

PART 14: P01–P12 PARAMETER SETTINGS

Item	Function	Options / Range	Default
P01	Unit Setting	00 = km/h / 01 = mph	00
P02	Wheel Size	12~29 inches	29
P03	Speed Limit	1~99 km/h	25 km/h
P04	Start Mode	00 = Zero Start 01 = Non-zero Start	00
P05	Drive Mode	00 = Pedal Assist Only 01 = Electric Drive Only 02 = Pedal Assist + Electric Drive	02
P06	Assist Start Strength	00~05	03
P07	Controller Current Limit	10~25 A	18 A
P08	Power-on Password	PSd-y = Enable PSd-n = Disable	Disabled
P09	Sensor Mode	0 = Torque Sensor 1 = Cadence Sensor	0
P10	Voltage Setting	36V / 48V / 52V	48 V
P11	Cruise Control	0 = Off / 1 = On	0
P12	Cruise Delay Time	3~8 seconds	5

PART 15: POWER-ON PASSWORD SETTING

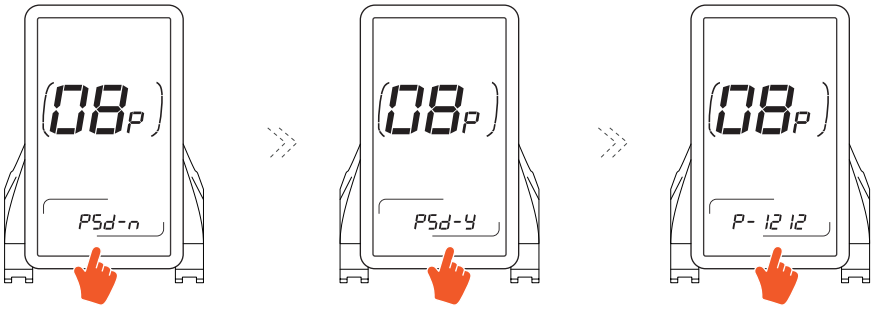

Disable Enable Password Setup

Power-on Password Setting

The default password is 1212.

To enable the password, enter P08 and select PSd-y.
To disable the password, select PSd-n.


When setting a 4-digit password, the selected digit will flash.
Press【+】or【-】to change the number.
Press【M】to confirm and move to the next digit.
After all 4 digits are set, press and hold【M】to save.

Important

Except for the password setting, other advanced parameters are factory-configured. Do not change them unless instructed by your dealer or service team, as this may affect performance, safety, and legal compliance.

PART 16: ERROR CODES & SUPPORT

Troubleshooting overview.

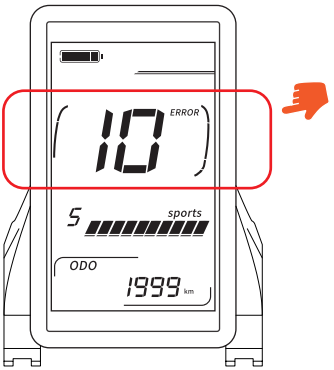

Important

If an error code appears, stop riding and check the possible cause. If the error remains after restarting the bike, contact your dealer or service team.

	Meaning	Suggested Action
Error 05	Brake fault	Make sure the brake lever returns to its normal position. Check the brake cut-off connector. If the fault persists, stop using the bike and contact an authorized service center.
Error 06	Low battery voltage	Charge the battery and check the battery connection.
Error 07	Motor fault	Check the motor cable and connector.
Error 08	Throttle fault	Release the throttle and check the connector.
Error 09	Controller fault	Stop riding and contact service.
Error 10	Communication reception fault	Check the display cable and connector.

BIKE USE & MAINTENANCE

01 | BEFORE YOUR FIRST RIDE

02 | ROUTINE MAINTENANCE

03 | FRAME CODE

01 BEFORE YOUR FIRST RIDE

- Before riding your LANKELEISI VORA-7 for the first time, complete a full safety check.
- Fully charge the battery before the first ride.
- Use only the charger supplied or approved by LANKELEISI.
- Charge the battery in a dry, ventilated indoor area. Keep it away from rain, snow, direct sunlight, heat sources, and flammable materials.
- Do not cover the charger while charging.
- Stop charging immediately if you notice odor, overheating, smoke, loose plugs, or charger damage.
- After charging is complete, disconnect the charger from the wall outlet first, then disconnect it from the bike or battery.
- Check that the battery is locked in place before riding.

PRE-RIDE CHECKLIST

Before each ride, check the following items:

- Handlebar and stem are straight and firmly tightened.
- The front axle is fully secured.
- Saddle and seatpost are locked, and the minimum insertion line is not visible.
- Pedals are correctly installed and tightened.
- Brake levers feel firm, and both brakes work properly.
- Brake rotors are clean and do not rub heavily against the calipers.
- Tires are inflated within the pressure range marked on the tire sidewall.
- Chain is clean, properly seated, and moves smoothly.
- Front light, rear light, reflectors, horn, and turn signals work properly.
- No cables are loose, stretched, pinched, or damaged.
- The display turns on normally and shows no error code.
- If anything feels loose, abnormal, or unsafe, do not ride the bike until it has been checked.

RIDING SAFETY

- Always follow local e-bike laws and road regulations.
- Wear a properly fitted helmet and suitable protective gear.
- Ride at a speed that matches your skill level, traffic, road surface, weather, and local laws.
- Test the brakes at low speed before entering traffic.
- Brake earlier on wet, sandy, icy, or uneven roads.
- Do not use a mobile phone, headphones, or any device that may distract you while riding.
- Do not ride if you are tired, under the influence of alcohol or drugs, or unable to control the bike safely.

02 ROUTINE MAINTENANCE

- Regular maintenance helps keep your LANKELEISI e-bike safe, reliable, and comfortable to ride.

BEFORE EACH RIDE

- Check tire pressure and tire condition.
- Check front and rear brake function.
- Check handlebar, stem, saddle, seatpost, pedals, and wheel fasteners.
- Check battery lock and battery level.
- Check chain condition.
- Check lights, reflectors, horn, and display.
- Listen for unusual noise, looseness, or vibration.
- If a part is damaged or does not work normally, stop using the bike and contact LANKELEISI support or an authorized service center.

AFTER RIDING

- After riding in rain, mud, sand, or dusty areas, wipe the bike with a soft, damp cloth.
- Dry the bike before storage.
- Clean mud and sand from the tires, chain, derailleur, brake area, and frame.
- Do not use a high-pressure water jet. Water pressure may damage bearings, seals, electrical connectors, and moving parts.
- Keep the charging port and battery contacts clean and dry.

CHAIN AND BRAKE CARE

CHAIN CARE

- This model uses a chain drive.
- Keep the chain clean and lightly lubricated.
- After riding in wet or dirty conditions, clean and dry the chain before applying bicycle chain lubricant.
- Wipe off excess lubricant to prevent dust buildup.
- If the chain skips, makes unusual noise, or feels loose, stop riding and have it checked by a qualified technician.
- Do not use strong solvents or pressure washing on the chain, derailleur, or motor area.

BRAKE CARE

- New brake pads and rotors need a short break-in period. During the first rides, brake gently and allow extra braking distance.
- Keep brake rotors clean and free from oil or grease.
- Do not touch the brake rotors after braking, as they may be hot.
- If braking power becomes weak, noisy, or uneven, stop riding and inspect the brake system.
- Replace brake pads when they are worn, contaminated, or damaged.
- Brake adjustment and hydraulic brake service should be performed by a qualified technician.

BATTERY CARE

- Use only the original or LANKELEISI-approved charger.
- Do not charge or store the battery near fire, heaters, direct sunlight, or flammable materials.
- Do not charge the battery in wet conditions.
- Do not use a damaged battery, charger, cable, or charging port.
- Avoid storing the battery fully charged or completely empty for long periods.
- For long-term storage, keep the battery charge level at about 50%–70%.
- Check the battery every 2–3 months during storage and recharge it if the level is low.
- Store the battery in a cool, dry place. Recommended storage temperature: 0–25 °C.
- Battery performance may decrease in cold weather. This is normal and will improve when the temperature rises.

MONTHLY CHECK & SERVICE INTERVALS

Check the following items at least once a month:

MONTHLY CHECK

- Tire wear, cracks, and tire pressure.
- Brake pad wear and brake performance.
- Chain cleanliness and lubrication.
- Tightness of main bolts and fasteners.
- Wheel alignment and spoke tension.
- Cable routing and connector condition.
- Suspension, front fork, and seatpost function.
- Battery mounting and charging port condition.


SERVICE INTERVAL

- We recommend a professional inspection after the first 100–200 km of riding, and then every 3 months or every 500–1,000 km, whichever comes first, with shorter intervals under severe riding conditions.
- During service, have the brake system, wheels, hubs, spokes, front fork, suspension, chain, chainring, freewheel, derailleur, bottom bracket, crankset, pedals, bearings, tires, motor, controller, display, wiring, frame, rack, fenders, and mounting points checked by a qualified technician.
- Rain, dust, heavy loads, rough roads, or daily commuting may require more frequent service.

03 FRAME CODE

FRAME SERIAL NUMBER

- The frame serial number is located near the bottom bracket area of the frame.
- You may need this number for product registration, warranty service, theft reporting, insurance records, and technical support.
- Please record your frame serial number and keep it in a safe place.
- When contacting LANKELEISI support, please provide the frame serial number, proof of purchase, and a clear description of the issue.

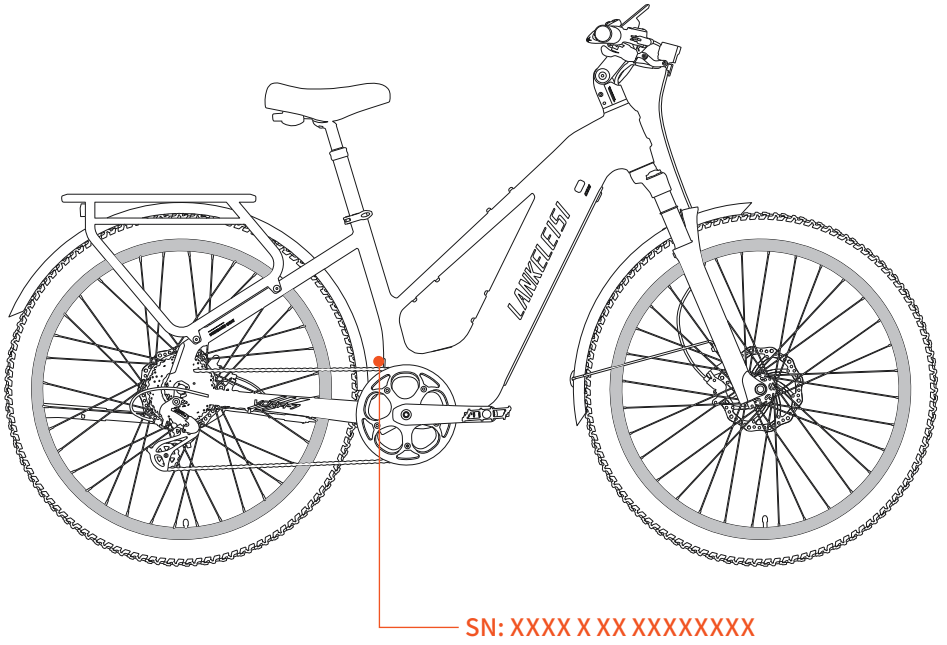

IMPORTANT REMINDERS

01 | WARRANTY SERVICE

02 | FAQ WARNINGS

03 | SAFETY WARNINGS

01 WARRANTY SERVICE

- LANKELEISI provides warranty service according to the official warranty policy for the country or region of purchase.
- Warranty service requires valid proof of purchase. The warranty period and covered parts may vary by product, component, and local regulations.
- Warranty claims should be submitted to LANKELEISI customer support or an authorized LANKELEISI dealer.

The standard warranty does not cover damage caused by:

- 1. Incorrect assembly, installation, or adjustment.
- 2. Misuse, abuse, neglect, or unsafe riding.
- 3. Unauthorized modification or repair.
- 4. Use of non-approved chargers, batteries, controllers, motors, or electrical parts.
- 5. Accidents, crashes, impact damage, fire, flooding, or natural disasters.
- 6. Lack of regular maintenance.
- 7. Normal wear of tires, brake pads, chain, grips, cables, bearings, and other consumable parts.
- 8. Commercial rental use, competition use, stunt riding, or off-road abuse.
- 9. Damage caused by exceeding the maximum load limit.
- 10. Water damage caused by improper washing, immersion, or high-pressure cleaning.
- For warranty support, contact LANKELEISI with your order information, frame serial number, photos or videos of the issue, and a description of how the problem occurred.

02 FAQ WARNINGS

Q: What type of e-bike is the LANKELEISI VORA-7?

- A: The VORA-7 is an electric bicycle designed for daily commuting, urban riding, and light trekking on paved or well-maintained roads. it is not designed for racing, downhill riding, mountain trails, jumps, or extreme off-road use.

Q: What is the weight of the bike?

- A: The approximate weight is 32 kg including the battery. The final weight may vary slightly depending on configuration and accessories.

Q: How long does it take to fully charge the battery?

- A: A full charge takes approximately 6~7 hours, depending on the remaining battery level, charger output, and ambient temperature.

Q: What is the riding range per charge?

- A: The riding range is approximately 80–150 km. Actual range depends on rider weight, assist level, road surface, tire pressure, temperature, wind, riding style, and load.

Q: What tire pressure should I use?

- A: Always follow the pressure range printed on the tire sidewall. Adjust the pressure according to rider weight, load, and road conditions. Do not exceed the maximum tire pressure.

Q: What should I do if I forget the password?

- A: Please contact after-sales service to reset the password. For security reasons, proof of purchase or bike information may be required.

Q: What is the maximum load capacity?

- A: The maximum total load is 120 kg, including the rider, cargo, and installed accessories. The rear rack load must not exceed 25 kg.

FAQ & SAFETY WARNINGS

Q: What should I do if a part is damaged or the bike feels abnormal?

- A: Stop riding immediately. Contact LANKELEISI support or an authorized service center for inspection. Do not continue riding if the brakes, steering, wheels, frame, battery, motor, or display do not work normally.

Q: Can I ride in the rain?

- A: The bike can be used in light rain, but it should not be submerged or washed with high-pressure water. Avoid deep water, flooding, and heavy rain. Dry the bike after riding in wet conditions.

Q: Can I modify the speed limit or electrical system?

- A: No. Do not modify the motor, controller, battery, display, wiring, or speed settings. Unauthorized changes may affect safety, legal compliance, and warranty coverage.

Q: Can I install a child seat, trailer, or heavy front basket?

- A: Only use accessories that are approved for this model and installed correctly. Extra loads may affect steering, braking, balance, and frame safety. Contact LANKELEISI support before installing child seats, trailers, or heavy accessories.

Q: How do I know when the battery is fully charged?

- A: Check the charger indicator light. A red light means the battery is charging. A green light means the battery is fully charged or the charger is in standby mode. After charging is complete, disconnect the charger from the power outlet and the battery.

03 SAFETY WARNINGS

- Read this manual before assembly and riding.
- Keep this manual for future reference.
- This e-bike is intended for normal road use, commuting, and light trekking. Do not use it for racing, stunt riding, downhill riding, or extreme off-road riding.
- Follow all local laws regarding e-bike use, speed limits, lighting, helmets, age limits, and road access.
- Always wear a helmet. Riding without a helmet may result in serious injury or death.
- Do not ride with passengers unless the bike is specifically equipped and legally approved for passenger use.
- Do not exceed the maximum load limit specified for this model. The total load includes the rider, cargo, and accessories. Do not exceed the model-specific load limit.
- Do not hang heavy bags, umbrellas, or large objects on the handlebar. This may affect steering control.
- Keep loose clothing, shoelaces, straps, and bags away from the chain, wheels, pedals, and crankset.
- Do not touch brake rotors while the wheels are turning or immediately after braking. Brake rotors may be hot and may cause injury.
- Check which brake lever controls the front and rear brake before riding. Brake configuration may vary by country or region.

SAFETY WARNINGS

- Ride slowly and brake gently on wet, slippery, sandy, or uneven roads. Braking distance may increase.
- Do not use headphones or a mobile phone while riding.
- Do not ride if you are unable to maintain full control of the bike.
- Do not open, modify, or repair the battery, motor, controller, display, charger, or wiring by yourself.
- Do not use chargers, batteries, controllers, or electrical parts that are not supplied or approved by LANKELEISI.
- Do not immerse the motor, battery, display, or controller in water.
- Do not wash the bike with a high-pressure water jet.
- Keep the battery and charger away from children.
- Charge the battery in a dry, ventilated area and away from flammable materials.
- If the battery becomes hot, swollen, leaking, smoking, or smells unusual, stop using it immediately and keep it away from flammable objects. Contact LANKELEISI support.
- Do not place strong magnets near the motor, controller, sensor area, or display.
- Do not modify the frame or original safety-related parts. Incorrect modification may cause loss of control, injury, or death.
- Replace damaged, cracked, worn, or deformed parts before riding.
- If you are not sure how to assemble, adjust, or maintain the bike, contact LANKELEISI support or an authorized service center.
- The information in this manual may be updated without notice. For the latest support information, visit www.lklsebike.com.



This manual is subject to change without prior notice.
LANKELEISI. All rights reserved.